




ATTO Technology, Inc.

ATTO host adapter bracket installation

Thank you for purchasing the ATTO Host Adapter. This page describes how to exchange the bracket on ATTO host adapters. For additional information on installing and configuring your adapter, refer to the **Installation and Operation Manual** for your specific model and the **ATTO Utilities Manual**.

- 1 Remove the original bracket from the adapter, being careful not to damage the board.
 - For ExpressPCI SCSI boards, use an ESD-safe small flat-head screwdriver to remove the standoffs that attach the bracket to the board.
 - For all other ATTO host adapters, use an ESD-safe #1 Phillips screwdriver to remove the Phillips screws at the top and bottom edges of the board.

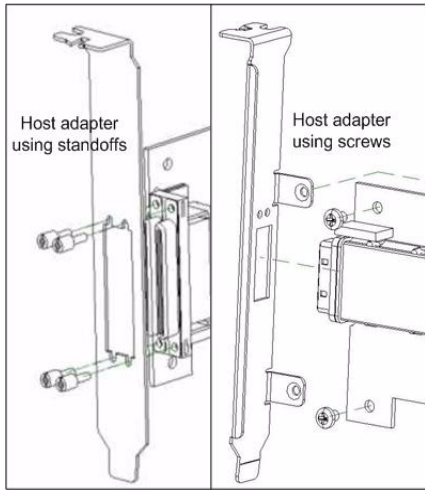

CAUTION

Make sure the screwdriver is centered in the top of the screw to prevent damage to the screw. Damaging the screw can void the warranty.

- 2 Set the bracket and standoffs or screws aside.
- 3 Place the adapter on top of the replacement bracket, positioning the bracket so that the holes in the bracket are aligned with the openings in the board.
- 4 Dip the standoffs or screws into Loctite® 242.
- 5 Use an ESD-safe #1 torque screwdriver set to a maximum torque of 3.98 in/lbs (0.45N m) to replace the standoffs or Phillips head screws removed previously.

CAUTION

Do not exceed the torque specification to avoid damaging the board, connectors or screws.

ATTO Technology, Inc.

155 CrossPoint Parkway
Amherst, New York 14068 USA

www.attotech.com

Tel (716) 691-1999
Fax (716) 691-9353

Sales support: sls@attotech.com
Technical support: Monday -- Friday, 8am-8pm EST
techsupp@attotech.com

© 2007 ATTO Technology, Inc. All rights reserved. All brand or product names are trademarks of their respective holders. No part of this document may be reproduced in any form or by any means without the express written permission of ATTO Technology, Inc.




ATTO Technology, Inc.

ATTO host adapter bracket installation

Thank you for purchasing the ATTO Host Adapter. This page describes how to exchange the bracket on ATTO host adapters. For additional information on installing and configuring your adapter, refer to the **Installation and Operation Manual** for your specific model and the **ATTO Utilities Manual**.

- 1 Remove the original bracket from the adapter, being careful not to damage the board.
 - For ExpressPCI SCSI boards, use an ESD-safe small flat-head screwdriver to remove the standoffs that attach the bracket to the board.
 - For all other ATTO host adapters, use an ESD-safe #1 Phillips screwdriver to remove the Phillips screws at the top and bottom edges of the board.

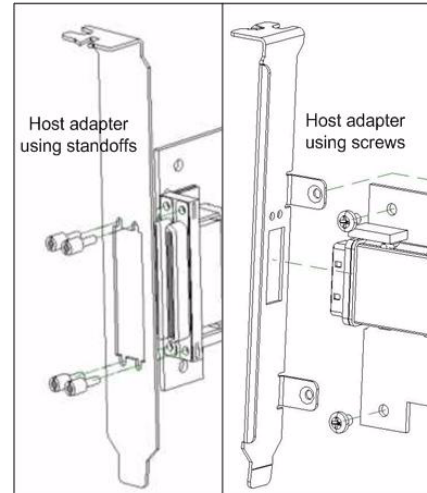

CAUTION

Make sure the screwdriver is centered in the top of the screw to prevent damage to the screw. Damaging the screw can void the warranty.

- 2 Set the bracket and standoffs or screws aside.
- 3 Place the adapter on top of the replacement bracket, positioning the bracket so that the holes in the bracket are aligned with the openings in the board.
- 4 Dip the standoffs or screws into Loctite® 242.
- 5 Use an ESD-safe #1 torque screwdriver set to a maximum torque of 3.98 in/lbs (0.45N m) to replace the standoffs or Phillips head screws removed previously.

CAUTION

Do not exceed the torque specification to avoid damaging the board, connectors or screws.

ATTO Technology, Inc.

155 CrossPoint Parkway
Amherst, New York 14068 USA

www.attotech.com

Tel (716) 691-1999
Fax (716) 691-9353

Sales support: sls@attotech.com
Technical support: Monday -- Friday, 8am-8pm EST
techsupp@attotech.com

© 2007 ATTO Technology, Inc. All rights reserved. All brand or product names are trademarks of their respective holders. No part of this document may be reproduced in any form or by any means without the express written permission of ATTO Technology, Inc.