

ATTO FlexRack™

Installation Manual



The Power Behind the Storage

155 CrossPoint Parkway
Amherst, NY 14068

P. +1.716.691.1999
atto.com

ATTO FlexRack Installation Manual © 2024 ATTO Technology, Inc. All rights reserved. All brand or product names are trademarks of their respective holders. No part of this manual may be reproduced in any form or by any means without the express written permission of ATTO Technology, Inc.

03/2024

PRMA-0491-000

Thank you for purchasing the ATTO FlexRack and Rail Kit. This guide gives you the basics for installing your FlexRack. For more information on the FlexRack, please visit our website at www.atto.com

Overview

This guide covers hardware installation, setup procedures, and troubleshooting tips for ATTO FlexRack Rail Kit.

ATTO FlexRack is compatible with [ATTO Thunderlink](#) and XstreamCORE 8100T products.

Ensure you have the equipment you need for the installation:

- ATTO FlexRack
- Velcro for power supply attachment
- 2 arms for stationary racking
- 2 slide rails
- Additional screws and brackets




Note **Not all screws and brackets will be needed.**

Hardware Installation

1. Use release buttons to remove the inner rail slide (S type chassis section) from the outer rail assembly towards the front mounting bracket.

2. Using #10 32 3/8 pan head screws, attach inner rail slide (S type chassis section) to the outside of the ATTO FlexRack with the spring-loaded tab towards the back of the unit.

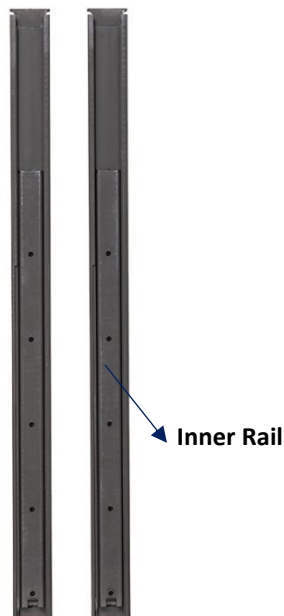


Note **The outer rail can be removed from the FlexRack chassis to allow for ease in mounting the rails to the rack.**


- Using #10 32 3/8 pan head screws and 32 3/8 keps nuts, attach FlexRack arms to back of outer slide rail to allow rack-shelf to adjust to your rack length.




- To mount (or) remove the Thunderlink (or) XstreamCORE 8100T in the rack, unscrew the lock.

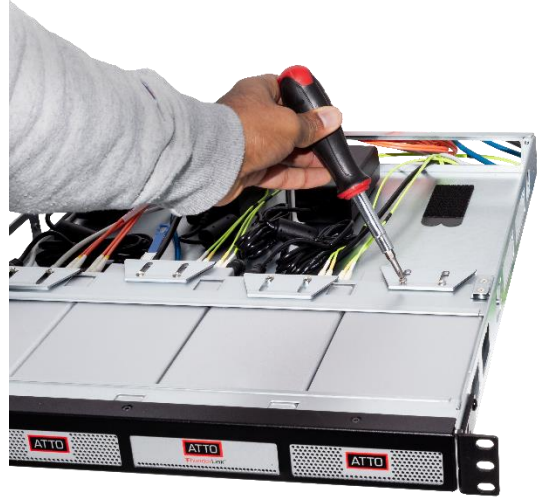


- Mount the outer rail to the rack using bar nut and #10 32 3/8 flat head screws.

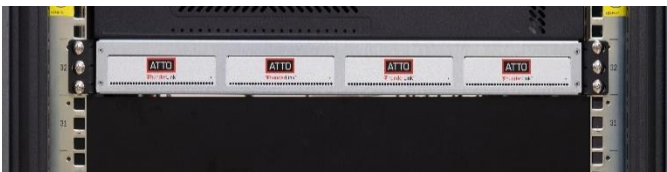

- Push the lock upwards and forward to detach it from the rack assembly.

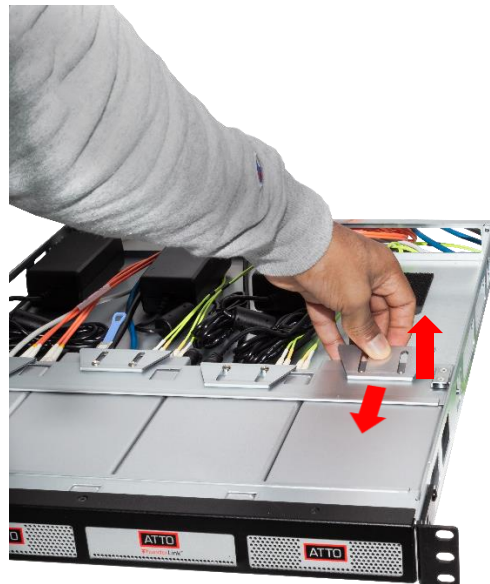


7. Insert the unit from under the rail support as shown in the image below.

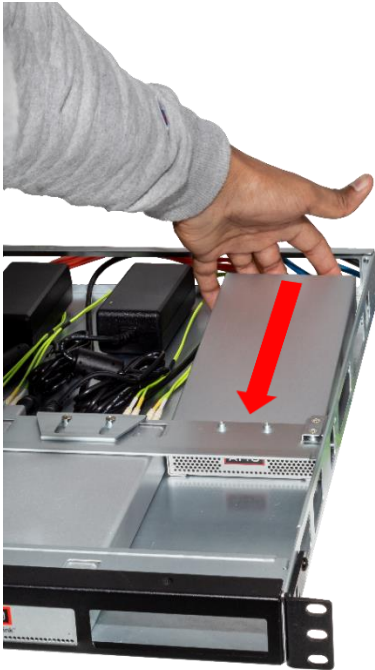

 Note *XstreamCORE 8100T is slightly longer than the Thunderlink.*

8. Push the unit into position.

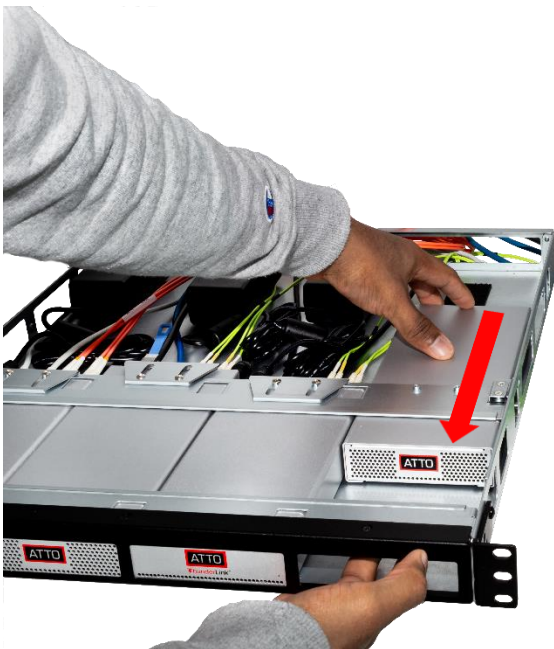


9. Connect the devices using [ATTO certified cabling](#) and secure the power adapter with the velcro provided.



10. Insert FlexRack into mounted rack rail and secure it with the screws provided.



Optional: Use #10 32 3/8 flat heads to secure rack if you will not utilize the slide feature.

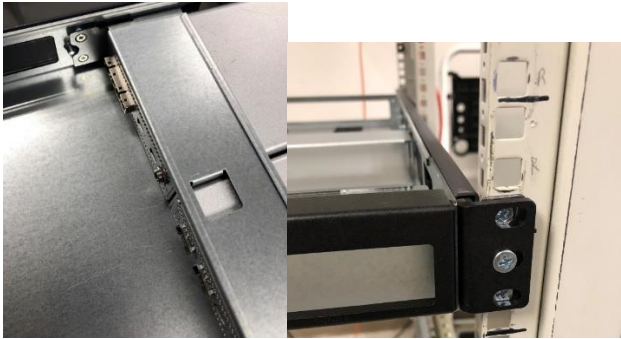

11. ThunderLink Adapters or XstreamCORE 8100T may be added at the beginning or swapped out once racked.

